


## XH-W1219 TEMPERATURE CONTROLLER MODULE

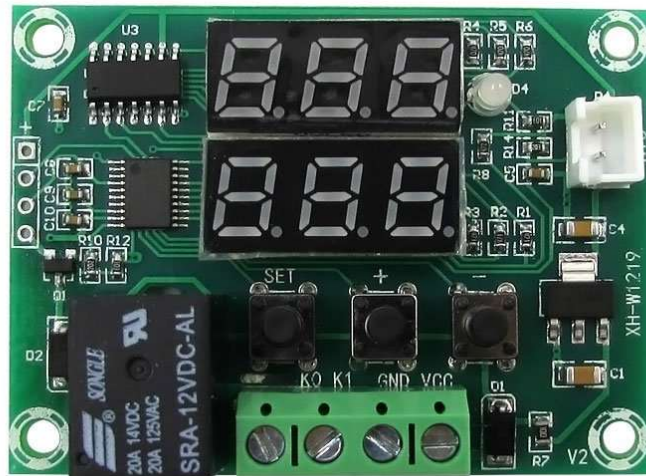

### DESCRIPTION

The XH-W1219 is a low cost yet highly functional self-contained temperature controller module for both heating and cooling applications.

### KEY FEATURES:

- 3-digit displays of current temperature and trigger temperature
- Module can operate in a heating or cooling mode of operation
- Multiple parameters can be set such as temp trip point, hysteresis and delay.
- Waterproof NTC temperature sensor has -30 to +110°C measurement range with stated 0.1°C accuracy
- Relay switches up to 120VAC @ 10A or 14VDC @ 10A
- 12V module operation

This module measures and displays the temperature and allows you to control power to most types of electrical equipment based on that temperature. A single output relay can be turned ON or turned OFF as temperature rises or lowers past a thermal threshold that you set. You can also set a temperature hysteresis, relay activation delay and thermal limits for the modules operation.

The XH-W1219 module is basically the same as the popular W-1209 module except it has a 2nd display added to always show the current trigger point along with the current temperature. When programming the parameters in the module, the dual displays make it a little easier see what you are doing since the top display shows the parameter selected while the bottom display shows the value you are setting. This module is slightly larger than the W-1209 and so will not fit in the acrylic case designed for that module.


A built in STM8S uC allows you to configure the module using the display and 3 pushbuttons. All settings are saved into non-volatile memory and are preserved during a power cycle.

The temperature is sensed by a high accuracy waterproof NTC 10K Thermistor that has a range of -30°C to 110°C (-22°F to 230°F). The sensor cable is about 18" long, but it is possible to splice wire to lengthen the cable if needed.

The relay is rated for up to 120VAC @ 10A and 14VDC @ 10A. When the relay is energized an LED is lit. It is also possible to use the relay on this module to switch higher power relays if you want to control a lot of power.

## Module Power

The module is powered from 12VDC which is connected to the screw terminal block. This can come from an AC wall adapter or similar power source.

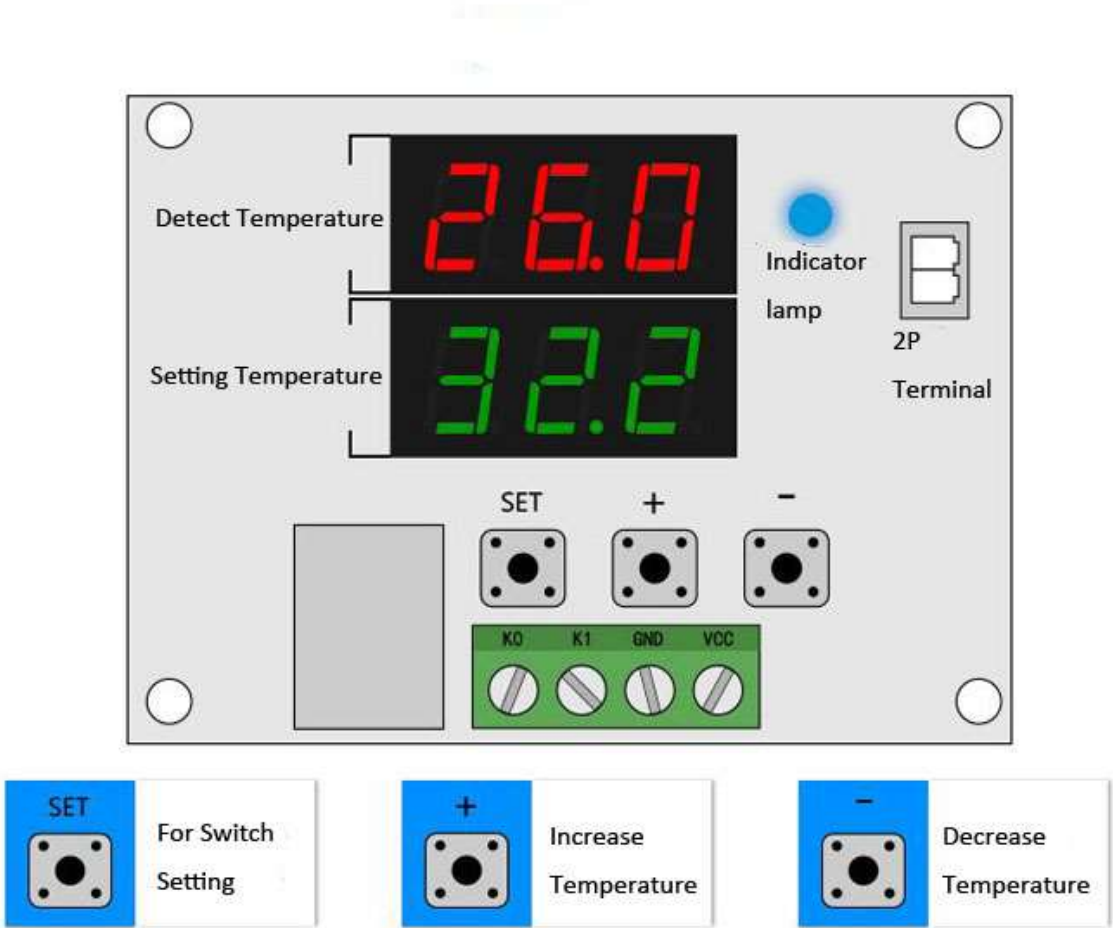

## Display

The module has two 3-digit displays composed of 0.28" high 7-segment displays.

The top red display will always display the current temperature measurement by default. When setting parameters, it will show the parameter (P0-P6) that is being set. Once you stop pushing buttons, after about 5 seconds the display will default back to displaying the temperature.

The bottom green display will always display the current trigger temperature set point by default. When setting parameters, it will show the value that you are setting for that parameter. Once you stop pushing buttons, it will default back to displaying the trigger temperature.



If you apply power to the module without the sensor attached, it will display 'LLL'. If you plug in the sensor, the current temperature will be displayed which is generally in the 20-25C range.

## Buttons

There are 3 buttons on the module that you can fiddle with.

- **SET** = Momentary press sets trigger temperature. Long press enters parameter setting mode
- '+' = Increment setting
- '-' = Decrement setting

## Setting Trigger Temperature

To set the trigger temperature which is the temperature that you want something to happen, press and release the **SET** button and the green display will start flashing. The default value is **28°C**

Using the +/- buttons, the value can be incremented or decremented in 0.1°C steps. Holding one of these buttons down will fast increment/decrement the value.

Pressing the **SET** button again saves the value that you have set and returns to the normal display. Alternatively if you stop pressing buttons rather than pressing SET, after a 5-8 second delay the value will be saved and the display will stop flashing.

## SETTING PARAMETERS

To enter the parameter setting mode, you long press the SET button for about 3 seconds. When the button is released the top red display will show '**P0**' which is the first

parameter setting. You may find that you need to long press the button twice before **P0** is displayed. The bottom green display will show the value that you are setting. The default value will be '**C**' which means it is in Cooling mode.

Once in parameter setting mode, pressing the **+/-** keys allows you to scroll between each of the parameters that can be set.

There are 7 parameters that can be programmed into the module:

- **P0** = (Heat / Cool) sets whether the relay is energized or de-energized when trigger temperature is reached.
- **P1** = (Hysteresis) sets difference in degrees between the Trigger temp and when relay changes state
- **P2** = (Max Temp) sets the maximum Trigger temp that can be set
- **P3** = (Min Temp) sets the minimum Trigger temp that can be set
- **P4** = (Temp Correction) sets an offset to use for the displayed value
- **P5** = (Delay) sets a time delay between when the Trigger temp is reached and when the relay is switched
- **P6** = (Alarm) sets a high temperature 'alarm' trip point

To reset the parameters back to factory settings, long press both the + and - buttons simultaneously

## **P0 (Heat / Cool)**

Sets whether the relay is energized or de-energized when the trigger temperature has been reached.

Long press **SET** to enter **P0** parameter setting mode. Default value is '**C**'.



Pressing **SET** again causes the value to flash and allows the value to be changed.

Use the **+/-** buttons to toggle between **C** and **H**.

**C** (default) = Cool Mode. The relay will energize when the temperature is reached. This is typically used to turn on a cooling device such as a fan.

**H** = Heat Mode. The relay will de-energize when the temperature is reached. This is typically used to turn off a heating device such as a heater.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

## P1 (Hysteresis)

Hysteresis refers to how much change in temperature must occur before the relay will change again state. For instance, if a heater is turned OFF at 30°C and the hysteresis is set to 2°C, the temperature must fall to 28°C before the relay is re-energized and the heater is turned back on.

This can be useful to avoid constantly triggering the device on and off (oscillating) right around the trigger temperature. This is how home thermostats typically work since it is hard on home heating and cooling systems to be constantly cycled on and off. On the other hand, something like an aquarium heater is fine to be operated with no hysteresis in order to hold as constant of a temperature as possible.

Long press **SET** to enter parameter setting mode, then **+/-** to reach **P1**. Default hysteresis setting is **2.0°C**



Pressing **SET** again causes the value to flash and allows the value to be changed.

Press the **+/-** buttons to set the desired hysteresis in **0.1°C** increments or **0.0** if no hysteresis is wanted.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

## P2 (MAX Temp)

This parameter limits the maximum Trigger temperature that can be set. It can be used as a safety stop to avoid an excessively high temperature from being set by a user of the module. If you are controlling a frog terrarium heater for your kid for instance, setting this to something like 30°C may just save Kermit's life if buttons might get randomly pushed.

Long press **SET** to enter parameter setting mode, then **+/-** to reach **P2**. Default setting is **110°C**.



Pressing **SET** again causes the value to flash and allows the value to be changed.

Press the **+/-** buttons to set the desired maximum temperature setting or leave at 110°C for maximum range.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

### **P3 (MIN Temp)**

This parameter limits the minimum Trigger temperature that can be set. It can be used as a safety stop to avoid an excessively low temperature from being set by a user of the module.

Long press **SET** to enter parameter setting mode, then **+/-** to reach **P3**. Default setting is -30°C.



Pressing **SET** again causes the value to flash and allows the value to be changed.

Press the **+/-** buttons to set the desired maximum temperature setting or leave at -30°C for maximum range.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

## P4 (Temp Correction)

This parameter provides an offset (either positive or negative) to the displayed temperature value. This feature can be used to match the reading to another device or if you need to make a correction due to an error induced by lengthening the sensor cable.

Long press **SET** to enter parameter setting mode, then **+/-** to reach **P4**. The default offset is **0.0°C**.



Pressing **SET** again causes the value to flash and allows the value to be changed.

Press the **+/-** buttons to set the desired offset in temperature to be used.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

## P5 (Delay)

This parameter provides a delay between when the Trigger temperature is reached and when the relay is energized or de-energized. This setting can range from 0-10 minutes in 1 minute increments.

Long press **SET** to enter parameter setting mode, then **+/-** to reach **P5**. The default value is **0**.



Pressing **SET** again causes the value to flash and allows the value to be changed.

Press the **+/-** buttons to set the desired delay to be used.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

## P6 (Alarm)

This parameter provides a high temperature alarm. When the set temperature is reached, the relay is deactivated and the display shows '**HHH**' until the temperature goes below the alarm set-point.

Long press **SET** to enter parameter setting mode, then **+/-** to reach **P6**. The default is **OFF**.



Pressing **SET** again causes the value to flash and allows the value to be changed.

Press the **+/-** buttons to toggle the alarm **ON** or **OFF**.

If the alarm is toggled to **ON**, pressing the **SET** button again now enters the alarm temperature setting mode. Default is '**00**'. Range is 0-110.

Press the **+/-** buttons to enter the desired alarm temperature.

After no button pushes for 5-8 seconds, the setting is saved and the display reverts back to displaying the current temperature.

## MODULE CONNECTIONS

### 1×2 XH2.54 White Connector

The temperature sensor plugs into the white connector. It is keyed and will only go in one way though the orientation does not matter.

### 1 x 4 Screw Terminal Block

- **GND** = Ground for the module. Connect to 12VDC supply ground
- **+12V**= Power for the module. Connect to 12VDC.
- **K1** = Relay switch contact 1
- **K0** = Relay switch contact 2

The relay switch contacts are interchangeable. One side should connect to the power for the load which can either be AC or DC and the other side should connect to the load itself.



There is 4 solder pads on the left side of the module. These aren't typically used unless you are trying to hack the module and reprogram it as shown in the link in Further Reading down below, but the power and ground may be useful in some applications.



## 1 x 4 Solder Pads



- '+' = 5V. This is the output of the 5V regulator on the module or it can be used to power the module while programming the uC on it.
- '-' = SWIM (Single Wire Interface Module) connects to pin 18 on the STM8 uC.
- ' ' = NRST (Reset) connects to pin 4 on the STM8 uC.
- '-' = Ground

### 12V connection mode

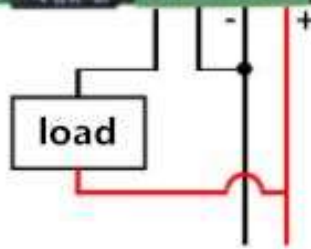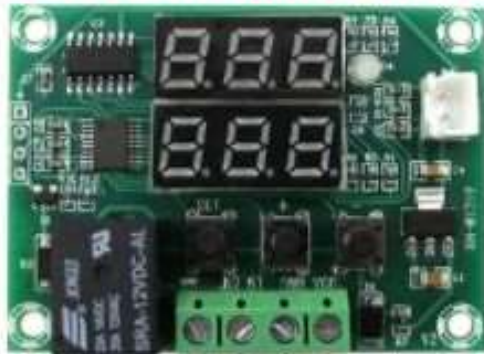

12 v power supply

### 220V connection mode

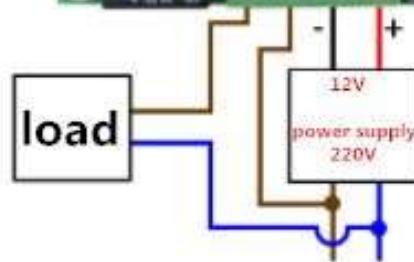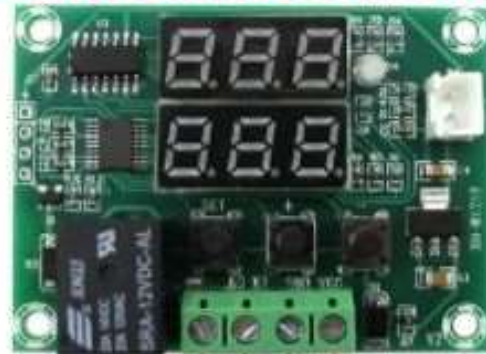

## OUR EVALUATION RESULTS:

This is a very commonly used module for temperature control and for good reason. It packs a lot of functionality into a small inexpensive package and is one of our favorite modules to use.

Although we love using uCs to monitor and control widgets using custom software as much as the next person, sometimes you just want something to get the job done and do it well and these modules fit that bill nicely.

We have tested these modules at the full rated 120VAC @ 10A as well as 12VDC @10A without any issues noted. At the full 10A, the relay does get fairly warm so keeping current under about 8A will help to ensure a good service life.

Stated accuracy is  $\pm 0.1^{\circ}\text{C}$  which seems somewhat optimistic. Out of the box, the accuracy is closer to  $\pm 0.5^{\circ}\text{C}$  which is still pretty good. One nice feature is the temperature correction parameter that can be used to calibrate the unit against a reference thermometer if greater accuracy is required.

**BEFORE THEY ARE SHIPPED, THESE MODULES ARE:**

- Inspected
- Basic temperature measurement and relay operation verified
- Packaged in a resealable high quality ESD bag for protection and easy storage.

*Notes:*

1. *This module will not fit in the enclosure designed for the W-1209 module as it is slightly larger.*
2. *Some relays show a rating misprint of 14VAC when it should be 14VDC. This is a misprint only and does not affect the performance of the part.*
3. *Some relays show a rating of 14VDC @ 20A. I would not put more than 10A through this part.*

**TECHNICAL SPECIFICATIONS**

<b>Temperature Control</b>		
Temperature Range		-30 ~ 110°C
Resolution	-9.9 to 99.9°C	0.1°C
	Other temperatures	1°C
Accuracy		0.1°C
Thermal Sensor		NTC 10K Thermistor
<b>Relay Maximum Ratings</b>		
VAC	120VAC	10A
	240VAC	5A

VDC	0-14VDC	10A
<b>Operating Ratings</b>		
DC Power Input		12VDC
Operating Current	Relay inactive	40mA (typ)
	Relay activated	90mA (typ)
<b>Dimensions</b>	L x W x H	60 x 44 x 16mm (2.4 x 1.7 x 0.6")
	Temperature probe length	45cm (18")

## FURTHER READING

These modules use the STM8S microcontroller which has pretty good software support. Given that this module sensor input is based on a resistive type sensor, the module can potentially be connected to other similar sensors such as LDR light, strain or angle sensors.